




Travel Setting Instructions for Sizes 1.75 SPD / 1.75 SPS / 2.5 SPS

Limit Switch System

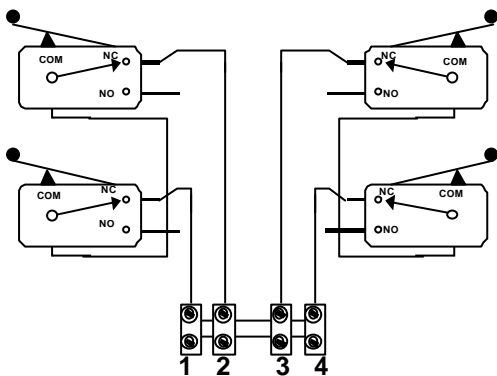

- a) Remove adjustment shield 2.
- b) Momentarily jog to verify that it is clockwise rotation. Adjusting nut 1 must be traveling towards limit switch A.
- c) If unit is rotating in the wrong direction, reverse motor leads or reverse limit switch connections such that wires 1 and 2 connect to terminals 3 and 4 and wires 3 and 4 go to terminals 1 and 2 respectively.
- d) While motor is running in the clockwise direction turn adjusting nut 1 with screwdriver or finger until desired vent location and the motor is stopped.
- e) While holding adjusting nut 1, adjust in the counter clockwise direction by repeating step d) using adjusting nut 2 and limit switch b.
- f) Replace adjustment shield 2 in reverse position from which you received it from the manufacturer ensuring that the shield edge retains the adjusting nuts in place.
- g) Replace cover to avoid dirt and humidity entering limit switch compartment.

